



Design Worksheet

Design:ITH Pencil Roll Case - Veronica and Me Designs.EMB


Height:	191.8 mm
Width:	289.3 mm
Stitches:	18,564
Colors:	7
Color changes:	6
Trims:	22
Machine format:	Janome
Hoop:	PRH300 (300 x 200)
Fabric type:	Pure Cotton
Required stabilizer:	Topping: Backing: Tear Away x 2
Total bobbin:	43.21m

Color Sequence:					
#	Color	Element	Code	Name	Chart
1.	9		0142	Sterling	Hatch Default
2.	3		1300	Tangerine	Hatch Default
3.	8		1876	Chocolate	Hatch Default
4.	4		0220	Sunbeam	Hatch Default
5.	12		4010	Caribbean Blue	Hatch Default
6.	7		2900	Deep Purple	Hatch Default
7.	1		5912	Erin Green	Hatch Default

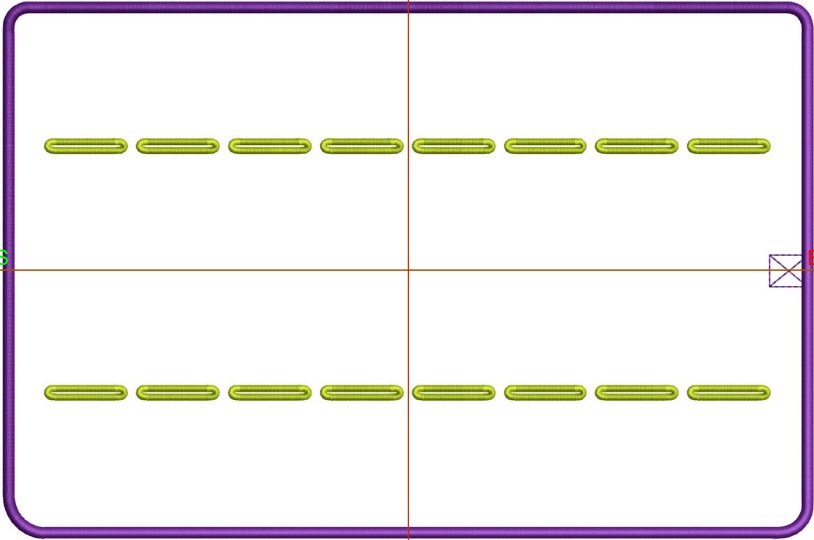


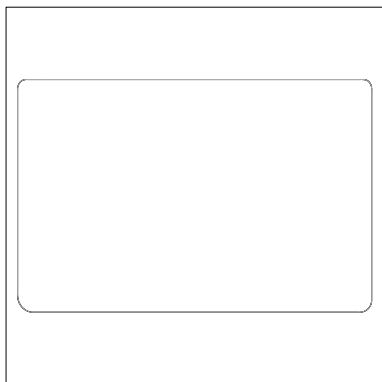


Stop #: 1
 Element:
 Code: 0142
 Name: Sterling
 Chart: Hatch Default
 Stitches: 401
 Thread used: 2.08m

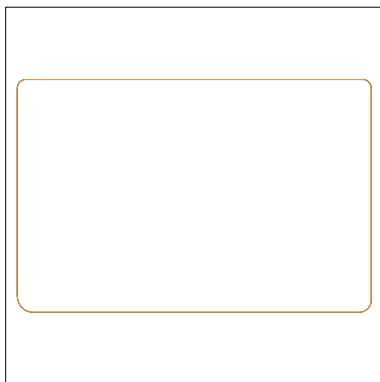


Stop #: 2
 Element:
 Code: 1300
 Name: Tangerine
 Chart: Hatch Default
 Stitches: 390
 Thread used: 2.04m




Stop #: 3
 Element:
 Code: 1876
 Name: Chocolate
 Chart: Hatch Default
 Stitches: 48
 Thread used: 0.13m

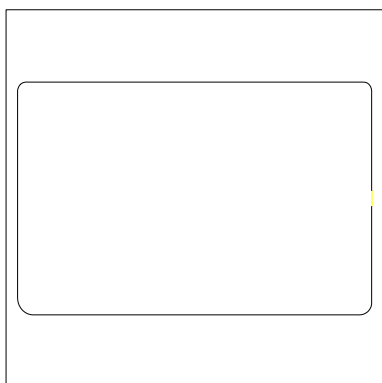


Stop #: 4
 Element:
 Code: 0220
 Name: Sunbeam
 Chart: Hatch Default
 Stitches: 21
 Thread used: 0.10m

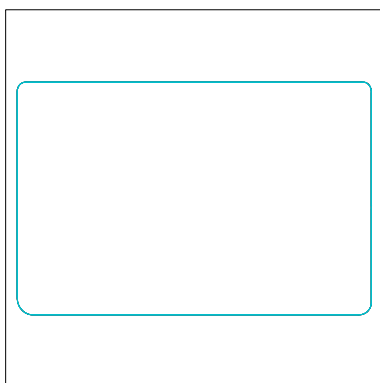

Stop #: 5
 Element:
 Code: 4010
 Name: Caribbean Blue
 Chart: Hatch Default
 Stitches: 777
 Thread used: 4.07m

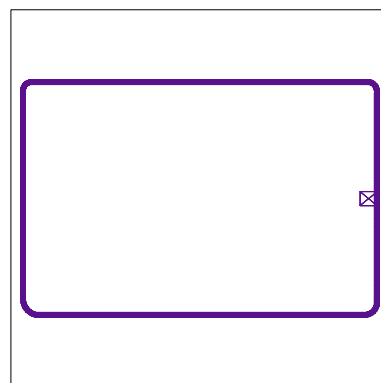

Stop #: 6
 Element:
 Code: 2900
 Name: Deep Purple
 Chart: Hatch Default
 Stitches: 8,758
 Thread used: 62.01m

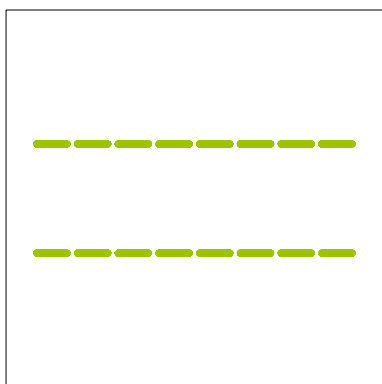

Stop #: 7
 Element:
 Code: 5912
 Name: Erin Green
 Chart: Hatch Default
 Stitches: 8,169
 Thread used: 39.61m

Supplies

1. [Wash away stabilizer](#) (the fabric kind)
2. Fabric Pieces x2 – at least 21cm x 31cm each (either the same or different for the top and bottom)
3. [Hot Melt Web](#) and [cut away stabilizer](#) or fusible cut away stabilizer (Optional depending on your fabric type - I used quilting cotton and wanted a bit more body)
4. Thread colour and matching bobbin - I used [Hemingworth Classic Black](#) top thread and a [Black Prewound Bobbin](#)
5. Piece of elastic (approx. 3inches/7.5cm long x 1inch wide) OR two pieces of ribbon at least 1inch/2.5cm wide
6. An embroidery machine with at least a 20x30cm/8x12inch embroidery area and hoop for your machine. I used my [VE2300 machine](#) with the [biggest hoop](#)
7. [Small snip scissors](#) (for cutting the button holes) and your favourite [applique scissors](#)
8. Tape or pins to hold the elastic in place while you stitch

Steps to Make It

There are [photos on the next pages](#) of each step as well.

9. Prep fabric and stabilizer – I used quilting cotton I had on hand so I added some cut away stabilizer to the pack of each piece to give it a bit more body.
10. Hoop the wash away and head to your machine with your thread, matching bobbin and design.
11. Thread the machine and plug your USB in with your design (or transfer it by WI-FI if you have a WI-FI capable machine).
12. Stitch the first step (Step 1) – This is the placement line so you know where to put the first fabric piece face down on the hoop.
13. Stitch the next step (Step 2) which will tack down the first layer of fabric
14. Stitch the next step (Step 3) which is a placement line to show you where to place the elastic or ribbon – have it overlap around 1inch/2.5cm into the seam, the overlap will be secured down in a later step
15. Stitch the next step (Step 4) which will tack the elastic down
16. Place your next piece of fabric face up and stitch the next step (Step 5) which will tack all the layers together.

17. Trim all the excess fabric away from both layers of fabric – be careful not to cut the elastic/ribbon.
18. Stitch the next step (Step 5) which will add a reinforcement stitch for the elastic/ribbon and then finish off the entire edge of the project with a satin stitch.
19. Stitch the final step (Step 6) which will stitch the button holes.
20. Remove the project from the hoop and trip away the excess wash away stabilizer from around the edge of the design as well as on the side of the fabric which was face down in the hoop. Use some warm water to dab away at the bits of wash away which are left on the project and allow to dry.
21. Once dry, take your favourite snips or small scissors and cut open the centres of the button holes.

And you're done!

You can then add a decoration, name or saying with some HTV (heat transfer vinyl) as I have done in the example.

Top Tip: if your wash away stabilizer moves a bit in your hoop – [try Gary from Echidna Sewing's hooping hack](#)

Let me know you get on with the design and feel free to share photos of your work in my - [NZ Machine Embroidery Addicts Facebook Group](#)

If you need any help along the way feel free to get in touch with me by email - mandy@veronicaandme.com



